

Scan Mode



Start Configuration



Trigger On/Good read Off



Trigger On/Off



Continuous/No trigger



Flash



Testing



End Configuration

Keyboard Mode



Start Configuration

Language



USA



Multi

Caps Lock



Off



On

Message Terminator



CR



None



Tab




Esc



End Configuration

Distributors

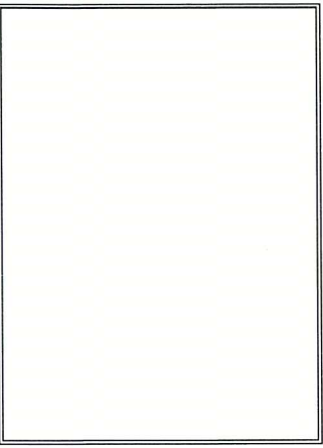

Programming Quick Guide

Interface Selection



Start Configuration



Keyboard



RS232



USB



End Configuration

Set All Default



Start Configuration



Set all default



End Configuration

Version



Show Version

USB Mode



Start Configuration

Language



USA



Multi

Caps Lock



Off



On

Message Terminator



CR



None



Tab



Esc



End Configuration

Rs232 Mode



Start Configuration

Baud Rate



9600



1200



2400



4800



19200



38400

Data Bit



8



7

Stop Bit



1



2

Parity



None



Even



Odd

Message Terminator



CR/LF



None



CR



LF



Tab



STX/ETX



EOT



End Configuration